



The "Rose Joint" can be removed - it can be screwed in or out.  
 The oil pick up can be infinitely positioned prior to screwing the assembly into place.  
 (Note there is no tap at the bottom. Oil change is done by removing the oil line at the engine end and draining).

# KITFOX 4 OIL TANK

## (and Rotec Project)



↑  
**Firewall**